

No.	Notes	MODEL TECHNICAL VARIATION HEATING CAPACITY	RKNL- A 08	RKNL- A 10	RKNL- A 12	RKNL- A 13
<b>HEAT EXCHANGER, BURNER/MANIFOLD</b>						
45	Stk	Main Limit - (Condenser Bulkhead) E - Electric	<a href="#">47-23610-19</a>	<a href="#">47-23610-21</a>	<a href="#">47-23610-27</a>	<a href="#">47-23610-19</a>
45	Stk	Main Limit - (Condenser Bulkhead) X - NOX	<a href="#">47-23610-23</a>	<a href="#">47-23610-25</a>	<a href="#">47-23610-29</a>	<a href="#">47-23610-19</a>
46		Main Limit Shield	<a href="#">AS-59152-01</a>	<a href="#">AS-59152-01</a>	<a href="#">AS-59152-01</a>	<a href="#">AS-59152-01</a>
87	Stk	Heat Exchanger - Includes Center Panel	<a href="#">AS-59066-01</a>	<a href="#">AS-59066-05</a>	<a href="#">AS-59066-04</a>	<a href="#">AS-59066-04</a>
88		Turbulators (NOX)	<a href="#">AE-58922-01</a> (4)	<a href="#">AE-58922-01</a> (5)	<a href="#">AE-58922-01</a> (6)	<a href="#">AE-58922-01</a> (6)
89		NOX Inserts	<a href="#">75-23684-01</a> (4)	<a href="#">75-23684-01</a> (5)	<a href="#">75-23684-01</a> (6)	<a href="#">75-23684-01</a> (6)
90		Divider Plate Gasket	<a href="#">68-23680-02</a>	<a href="#">68-23680-02</a>	<a href="#">68-23680-02</a>	<a href="#">68-23680-02</a>
91		Divider Plate	<a href="#">AE-59067-01</a>	<a href="#">AE-59067-01</a>	<a href="#">AE-59067-01</a>	<a href="#">AE-59067-01</a>
92		Collector Box Gasket	<a href="#">68-23680-01</a>	<a href="#">68-23680-01</a>	<a href="#">68-23680-01</a>	<a href="#">68-23680-01</a>
93		Collector Box Cover	<a href="#">AE-59068-01</a>	<a href="#">AE-59068-02</a>	<a href="#">AE-59068-06</a>	<a href="#">AE-59068-03</a>
94		Flue Duct	<a href="#">75-23678-01</a>	<a href="#">75-23678-01</a>	<a href="#">75-23678-01</a>	<a href="#">75-23678-01</a>
95		Flue Duct Gasket	<a href="#">68-23680-03</a>	<a href="#">68-23680-03</a>	<a href="#">68-23680-03</a>	<a href="#">68-23680-03</a>
96		Burner Shield	<a href="#">AE-58886-01</a>	<a href="#">AE-58886-01</a>	<a href="#">AE-58886-01</a>	<a href="#">AE-58886-01</a>
97	Stk	Limit (Manual Reset) - Before Approximate Date Code F4708	<a href="#">47-22861-01</a> (1)	<a href="#">47-22861-01</a> (2)	<a href="#">47-22861-01</a> (2)	<a href="#">47-22861-01</a> (2)
97	Stk	Limit (Manual Reset) - After Approximate Date Code F4708	<a href="#">47-22861-02</a> (1)	<a href="#">47-22861-02</a> (2)	<a href="#">47-22861-02</a> (2)	<a href="#">47-22861-02</a> (2)
98		Burner Compartment Floor	<a href="#">AE-58932-02</a>	<a href="#">AE-58932-02</a>	<a href="#">AE-58932-02</a>	<a href="#">AE-58932-02</a>

No.	Notes	MODEL TECHNICAL VARIATION HEATING CAPACITY	RKNL- A 08	RKNL- A 10	RKNL- A 12	RKNL- A 13
<b>BURNER / MANIFOLD GROUP</b>						
99	Stk, 1	Burner Tube w/Shield - Before Approximate Date Code F4708	<a href="#">75-22840-02</a> (4)	<a href="#">75-22840-02</a> (5)	<a href="#">75-22840-02</a> (6)	<a href="#">75-22840-02</a> (6)
99	Stk, 1	Burner Assembly - After Approximate Date Code F4708	<a href="#">AS-60993-04</a>	<a href="#">AS-60993-05</a>	<a href="#">AS-60993-06</a>	<a href="#">AS-60993-06</a>
99a		Bushing - After Approximate Date Code F4708	<a href="#">45-42519-01</a>	<a href="#">45-42519-01</a>	<a href="#">45-42519-01</a>	<a href="#">45-42519-01</a>
100		Burner Support - (Holds the Burners between the Burner Support Brackets) - Before Approximate Date Code F4708	<a href="#">AE-58887-02</a>	<a href="#">AE-58887-02</a>	<a href="#">AE-58887-02</a>	<a href="#">AE-58887-02</a>
100		Burner Support - (Holds the Burners between the Burner Support Brackets) - After Approximate Date Code F4708	<a href="#">AE-102650-01</a>	<a href="#">AE-102650-01</a>	<a href="#">AE-102650-01</a>	<a href="#">AE-102650-01</a>
101		Burner Support Bracket (2) - Before Approximate Date Code F4708	<a href="#">AE-61588-01</a>	<a href="#">AE-61588-01</a>	<a href="#">AE-61588-01</a>	<a href="#">AE-61588-01</a>
101		Burner Support Bracket (2) - After Approximate Date Code F4708	<a href="#">AE-61588-02</a>	<a href="#">AE-61588-02</a>	<a href="#">AE-61588-02</a>	<a href="#">AE-61588-02</a>
102	Stk	Manifold Assembly (w/o Orifices)	<a href="#">81-101153-01</a>	<a href="#">81-101153-01</a>	<a href="#">81-101153-01</a>	<a href="#">81-101153-01</a>
103		Square Head Plug - (Used on Manifold to plug extra holes)	<a href="#">81-23593-01</a> (3)	<a href="#">81-23593-01</a> (2)	<a href="#">81-23593-01</a> (1)	<a href="#">81-23593-01</a> (1)
104		Burner Orifice - Natural Gas:	See Orifice Selection Chart			
104		Burner Orifice - LP:	See Orifice Selection Chart			
104		Number of Orifices	(4)	(5)	(6)	(6)
105	Stk	Flame Sensor	<a href="#">62-23543-02</a>	<a href="#">62-23543-02</a>	<a href="#">62-23543-02</a>	<a href="#">62-23543-02</a>
106	Stk	Ignition Electrode and Cable	<a href="#">62-23556-01</a>	<a href="#">62-23556-01</a>	<a href="#">62-23556-01</a>	<a href="#">62-23556-01</a>